


A close-up photograph of a red upholstered chair, showing the texture of the fabric and the curved shape of the seat and backrest. The chair is positioned on the left side of the page, with the rest of the page being white.

VERCO


# Ergoform

Operating  
Instructions

## independent seat and back action

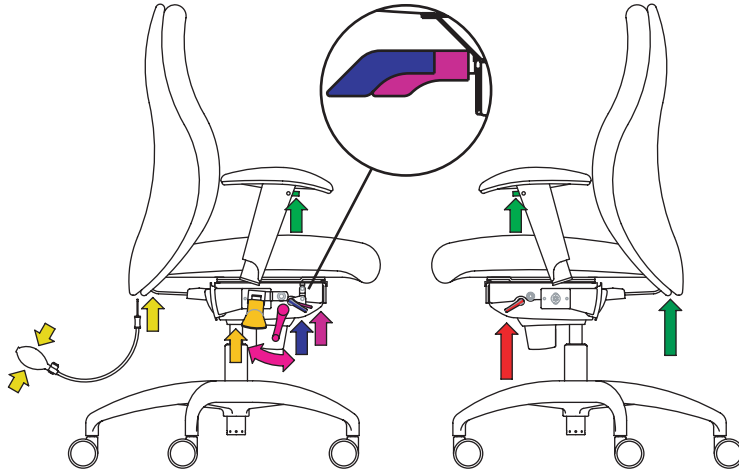

## synchronised action

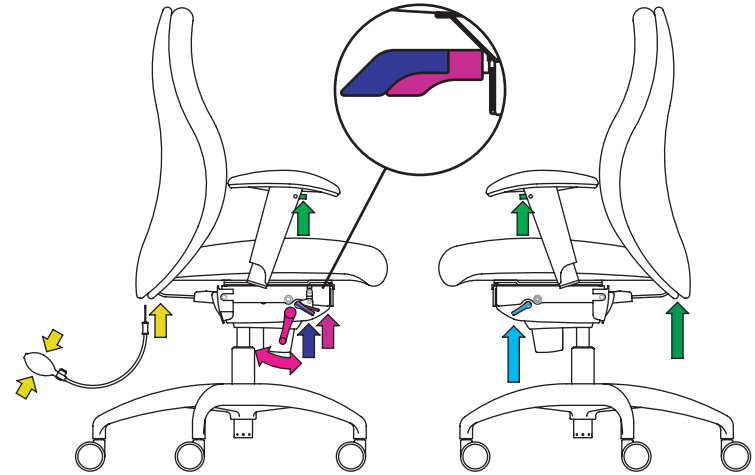

### back angle

lift lever to release action, lean backwards or forwards to achieve desired position, push lever down to lock. for 'dynamic posture' the chair may be left unlocked in its 'free float' mode.

*the action has a safety feature. when the action is first unlocked, lean against back to start the action.*

### seat tilt

lift lever to activate the seat tilt. use body weight to adjust, release lever to lock the seat in the desired position.

### inflatable lumbar

carefully insert the adaptor into the valve located at the base of the back.

pump balloon until desired support is achieved.

*carefully remove adaptor once lumbar support is correct, safely store for future use.*

### arm height

lift button under arm rest and raise or lower arm rest to the desired height. release button to lock.

### back height

place hand below the back, gradually lift to desired height. lift to top to allow back to drop to start position.

### seat height

lift lever and use body weight to raise or lower the seat to desired position, release lever to lock.

### seat depth

lift lever to release seat, use body weight to slide seat to desired position, release lever to lock.

### tension control

to decrease the tension of action, pull handle out and turn clockwise. turning anti-clockwise increases tension.

### syncro action

lift lever to release action, lean backwards or forwards to achieve desired position, push lever down to lock.

for 'dynamic posture' the chair may be left unlocked in its 'free float' mode.

*the action has a safety feature. when the action is first unlocked, lean against back to start the action.*

Ergoform Synchronised Action	<input type="checkbox"/>
Ergoform ISB Action	<input type="checkbox"/>

## care advice

Please regularly check that your chair's components are complete and in good working order and ensure that the chair is structurally sound and functioning properly.

Plastic components should be wiped with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

In order to maintain the fabric over the five year guarantee period, the upholstery must be cleaned and vacuumed on a regular basis.

Please visit [www.verco.co.uk](http://www.verco.co.uk) for further information.



**VERCO**  
OFFICE FURNITURE LIMITED

[www.verco.co.uk](http://www.verco.co.uk)