


- 1 Base foot is suggested to secure to a surface. Either through holes or supplied adhesive pads



- 2 Carefully place glass panel into foot with black rubber pad towards grub screws

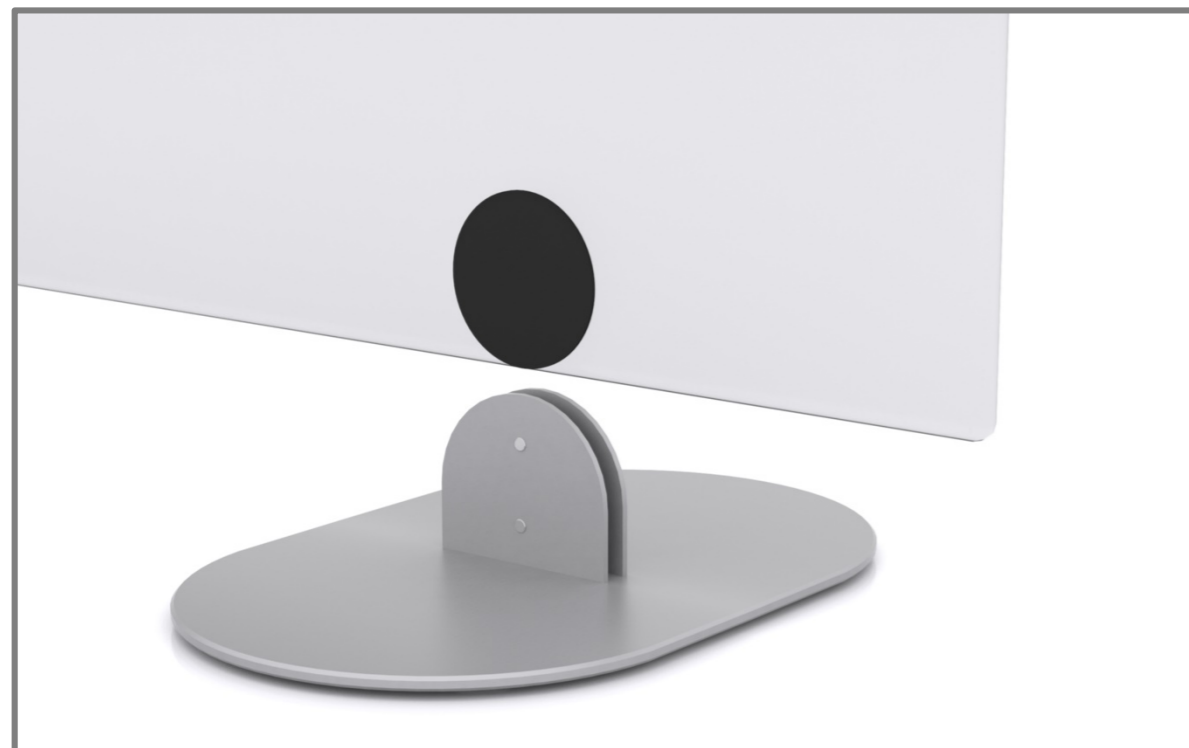

- 3 Carefully evenly tighten grub screws to secure glass panel, not over tightening